



Comments: Excellent correlation between KUNAKAIR and reference instruments. High peaks are perfectly detected as well as medium and low concentration, with lower accuracy at very low values.

Version: KUNAKAIR V2.





Kunak Air 1 V2

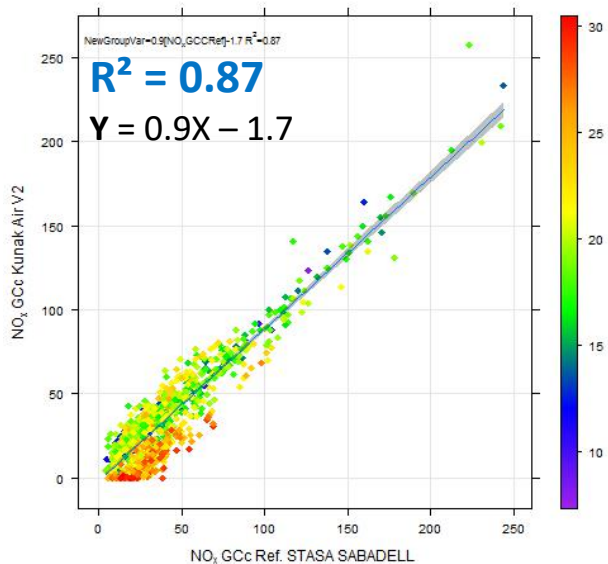

Kunak Air 2 V2

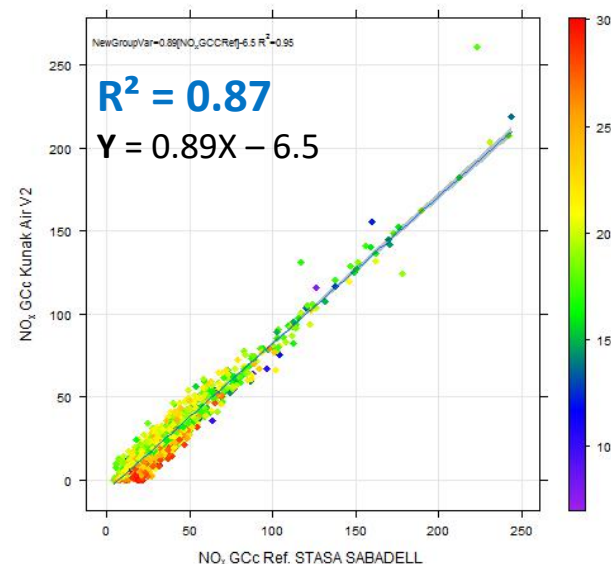

Time variation of two Kunak Air V2 and Ref. Torneo : NO_x GCc

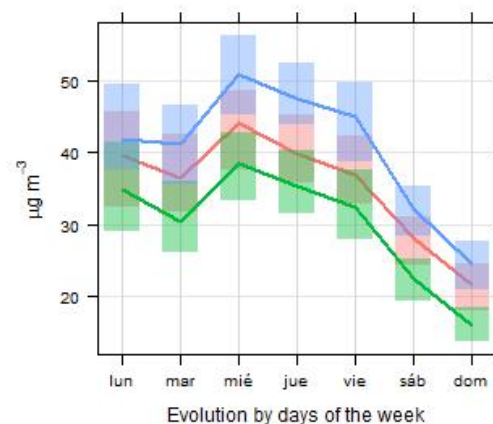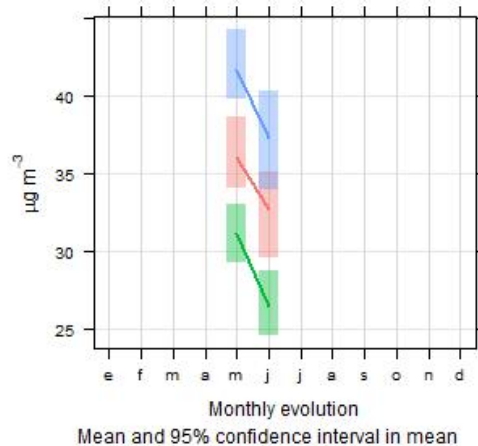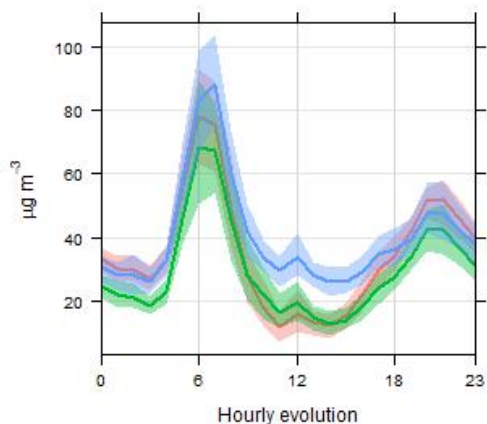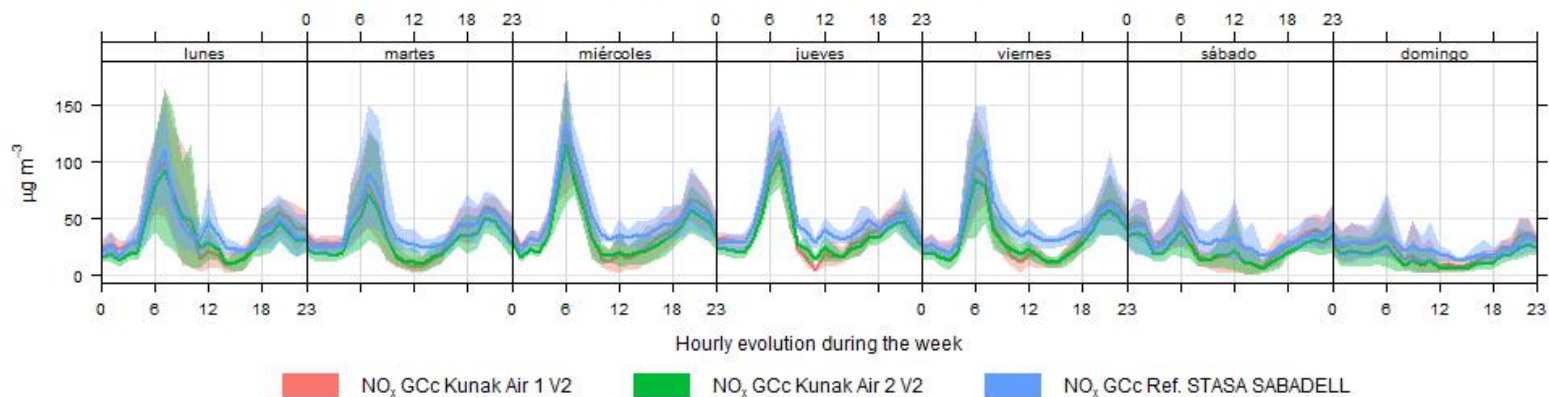

Device	R ²	ACCY (µg/m ³)	90% CONF. (µg/m ³)	AVG. GC. REF (µg/m ³)	AVG. GC. DUT (µg/m ³)	AV REF/DUT
KA 1	0.87	10.19	22.05	40.48	35.16	98.5/100
KA 2	0.87	11.29	20.53	40.48	29.95	98.5/100